

Manual 46/48 STE/FS

2+2 SPEED

12V & 24V

GENERAL INFORMATION
MOUNTING INSTRUCTIONS
IMPORTANT INSTALLATION INFORMATION
INSTALLATION DIMENSIONS
DRILLING TEMPLATE
EXPLODED VIEW
PARTS LIST
CONNECTING DIAGRAM
WIRE DIMENSION AND FUSE SIZE
WORLDWIDE DISTRIBUTION
WARRANTY



SERIAL NO: PS _____

ANDERSEN
STAINLESS STEEL WINCHES

CONGRATULATIONS

You have purchased an ANDERSEN high quality winch. This product is a result of many years of development and experience in producing winches for sailboats. This winch gives you a high degree of functionality and many years of safe and easy sail handling.

GENERAL INFORMATION

PLEASE READ THIS BEFORE INSTALLING YOUR ANDERSEN ELECTRIC WINCH.

The electric ANDERSEN winch has some built-in advantages:

- Easy to fit on your boat.
- Template included.
- Special tools included.
- Electric unit is turnable in 8 horizontal steps (45°).
- Easy to dismantle. Winch and electric unit can be dismantled separately.
- Winch in usual high **ANDERSEN** quality, featuring drum, roller bearings etc. of stainless steel. Electric unit housing is made of bronze which reduces corrosion, and guarantees easy dismantling for many years.
- Always the possibility of manual (2 speed) drive, just by inserting a standard winch handle. No shift-bottom of any kind.
- MODULAR POWER SYSTEM©: Always the possibility of changing from the 2+2 speed drive unit to a hydraulic drive unit or to the Compact© electric drive unit.

Mounting Installation:

Please follow the mounting instructions.

Ensure that each hole in the deck is bedded, including the big hole in the center.

IMPORTANT: Be careful not to put bedding compound IN the thread holes in the deck plate.

Ensure that the sealing ring (O-ring) on top of the gear unit is placed in its groove.

Electric Installation:

Please follow the installation instructions.

WARNING: Do not use smaller wire, than recommended in the diagram. This can cause malfunction of the winch and in worst case - FIRE. The wires should always be as short as possible.

Normal Use:

The electric motor has built-in overload circuit breaker, which breaks the circuit, before the motor gets too hot.

After a short period of cooling, depending on temperature under deck, ventilation etc., the winch will be ready for electrical operation again.

Meanwhile, if necessary, just insert a standard winch handle, and use the winch as a 2 speed manual winch. We recommend to remove the handle when operated electrically - From a safety point of view.

General Service Instructions:

The electric drive unit is lubricated & sealed and requires no further maintenance.

The part *on* deck is a standard self tailing winch, and needs regular service. We recommend dismantling, cleaning and lubrication *once* a year. Under extensive use, such as racing, charter or blue water sailing, we recommend to make a further lubrication check during the one year period.

We strongly recommend always to use ANDERSEN WINCH GREASE© when lubricating your winch. ANDERSEN WINCH GREASE© is a high quality silicone/Teflon® grease.

MOUNTING INSTRUCTION

46/48 STE/FS 2+2 SPEED (ver.4.0-)

12V & 24V

FIG.1

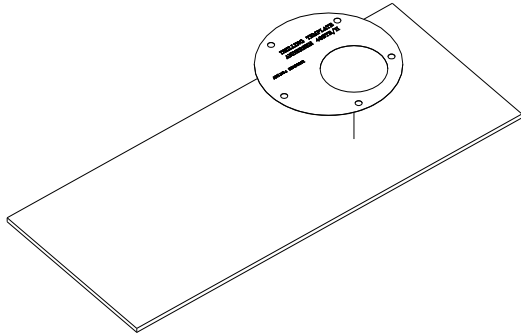


FIG.3

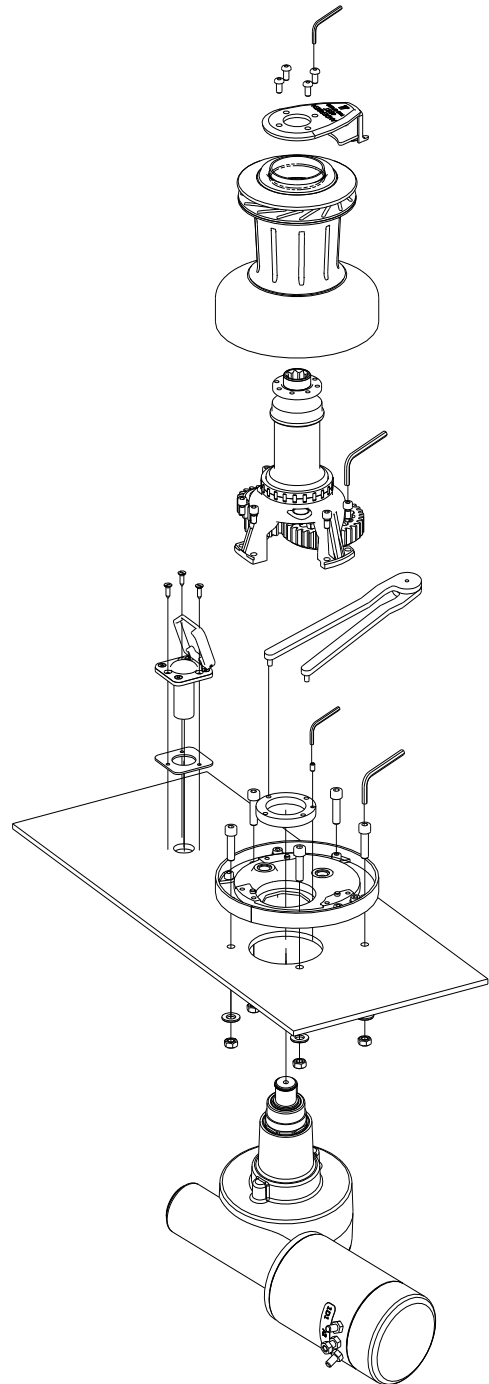


FIG.2


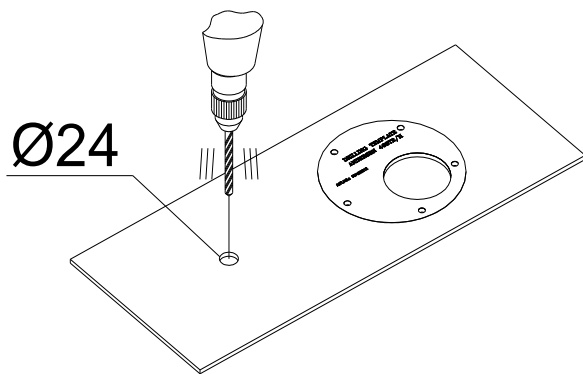


FIG.4

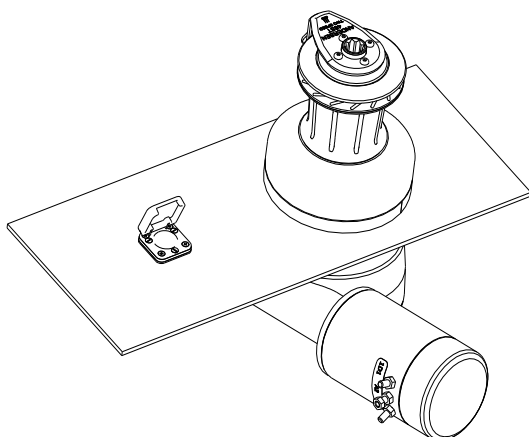



IMPORTANT INSTALLATION INFORMATION!

It is extremely important that your motor is aligned with your winch. Non-aligned motors will be noisy and gear wear will be accelerated.

To insure that your motor is aligned properly the motor flange must be flush with the deck plate and the eight-sided nut must fit snugly into the octagon in the deck plate.

This can be achieved with the help of the following:

- Drill the hole through the deck wider than the motor flange. When mounted there must be free space between the deck and the flange.
- Clean the deck hole before attempting to install the motor so that the motor flange does not catch splinters of fiberglass or wood when being inserted through the deck.
- Insure that the underside of the deck plate is clean and free from resin, varnish or sealants.
- Do not use a sealant between the flange and deck plate. An o-ring insures a waterproof connection. Extra waterproofing can be achieved by applying sealant to the top of the deck plate next to the mounting nut after installation.
- Insure that the locking screw on the mounting nut is not protruding beyond the contact surface before tightening the mounting nut. Tighten the locking screw when the mounting nut is securely in place.

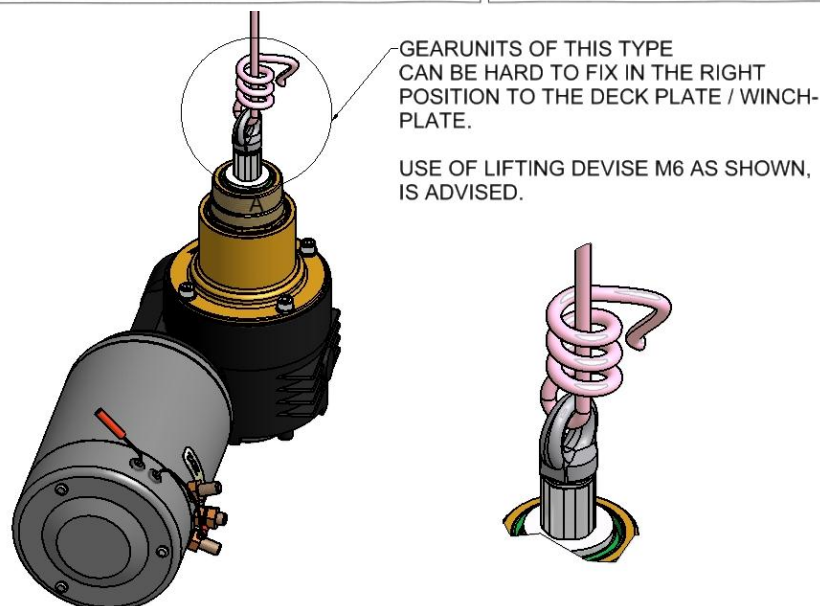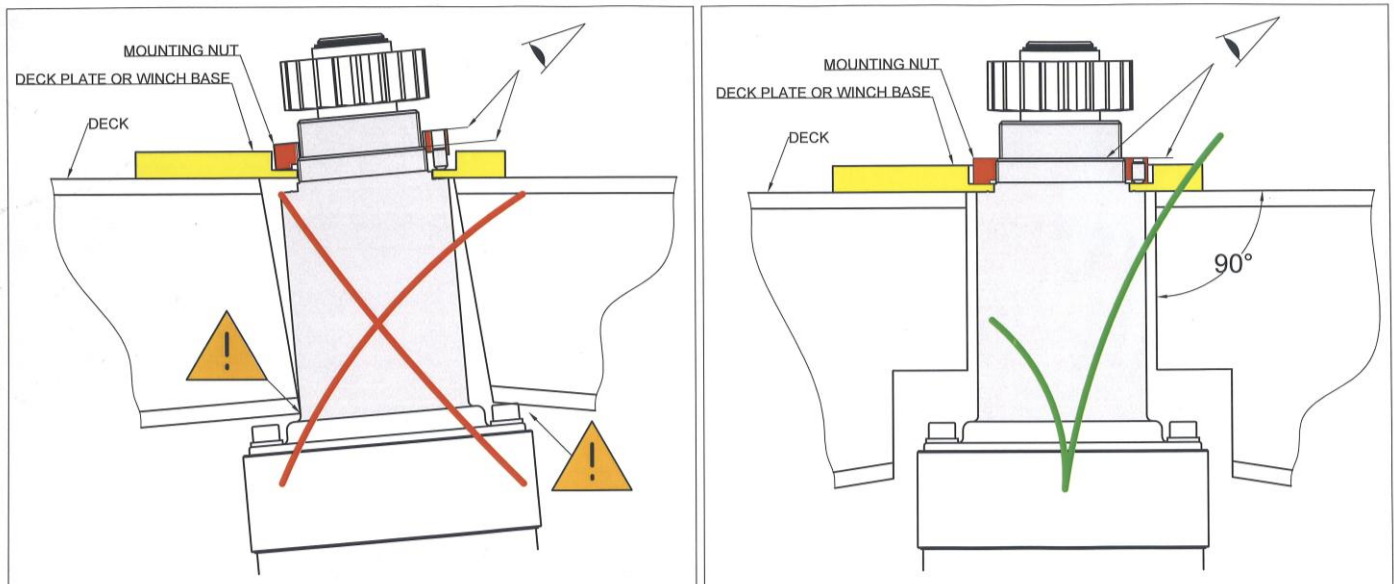


INSTALLATION DIMENSIONS

46/48 STE/FS 2+2 SPEED (ver.4.0 -)

12V & 24V


Non-dimensional accuracy!!!

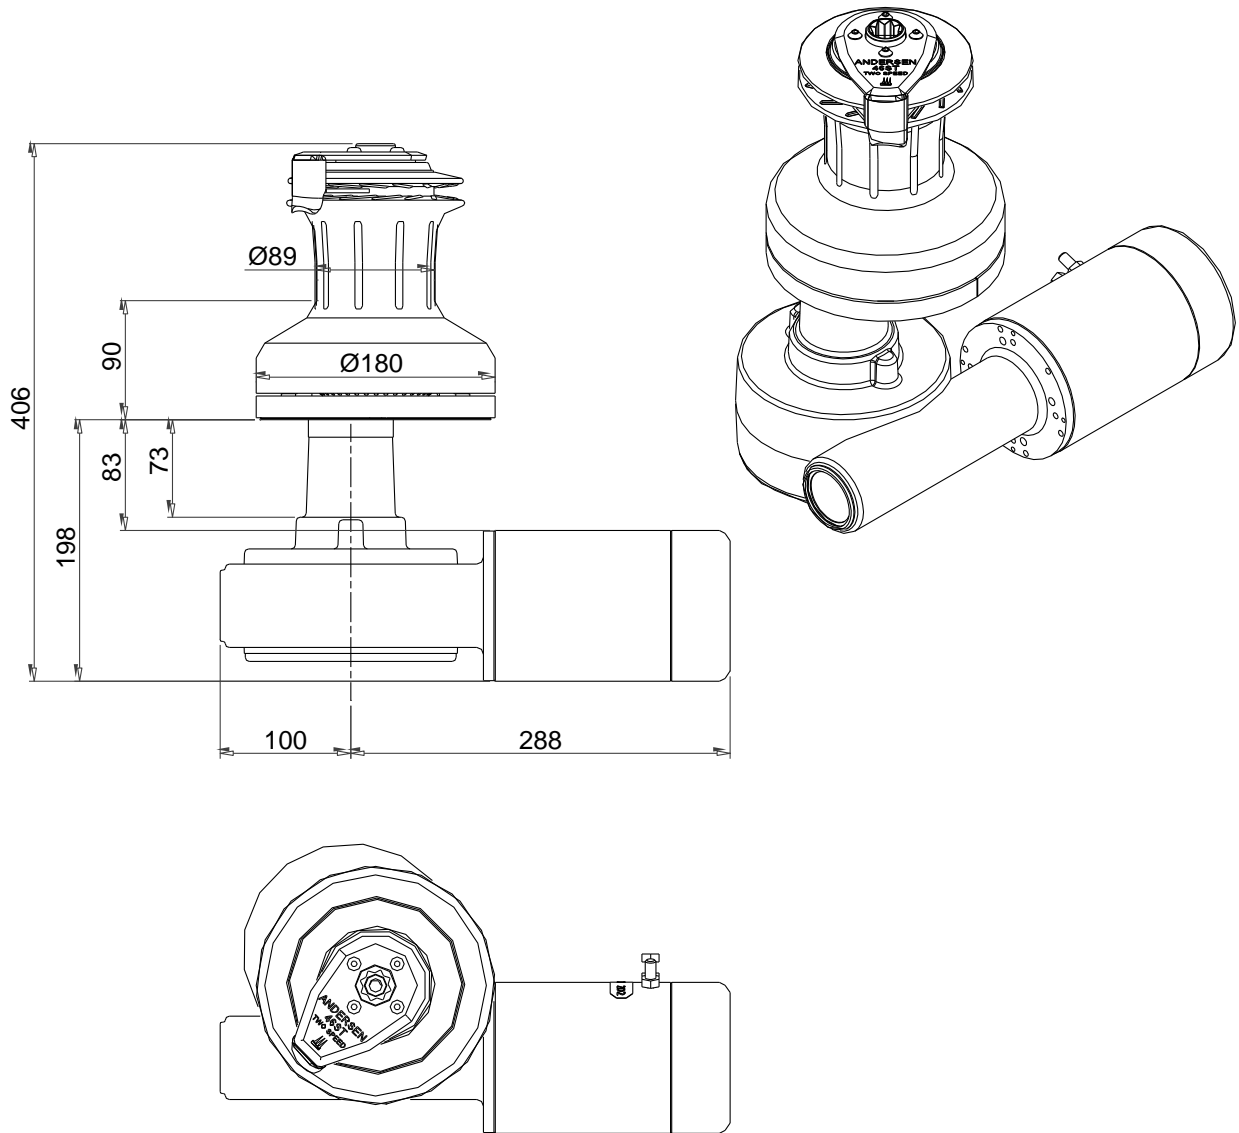

DRILLING TEMPLATE

46/48 STE/FS 2+2 SPEED (ver.4.0 -)
12V & 24V


Non-dimensional accuracy!!!

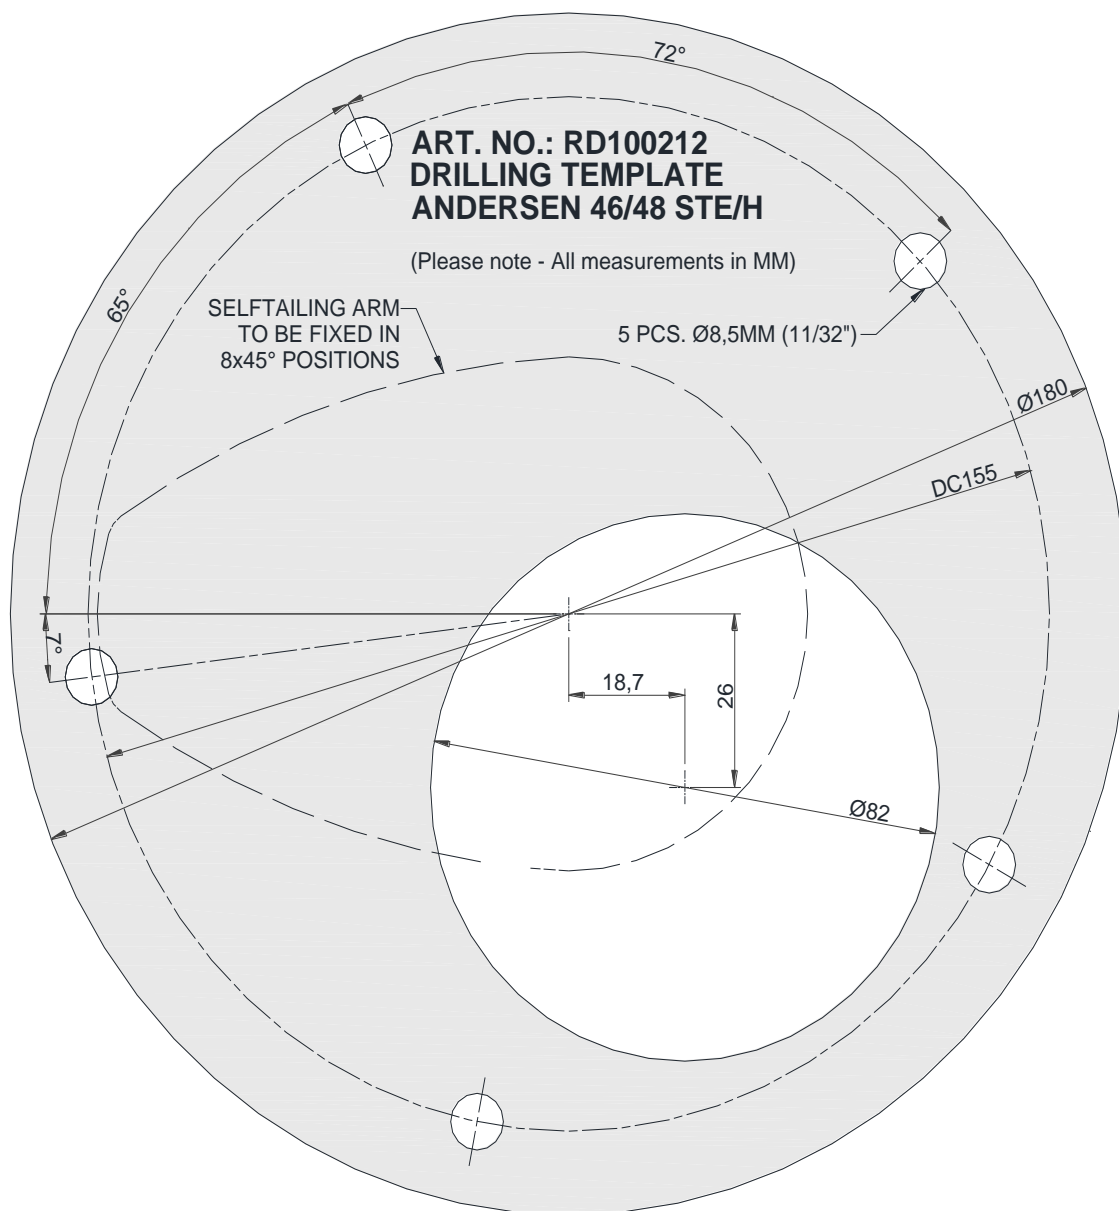


EXPLODED VIEW

46/48 STE/FS 2+2 SPEED (ver.4.0 -)

12V & 24V

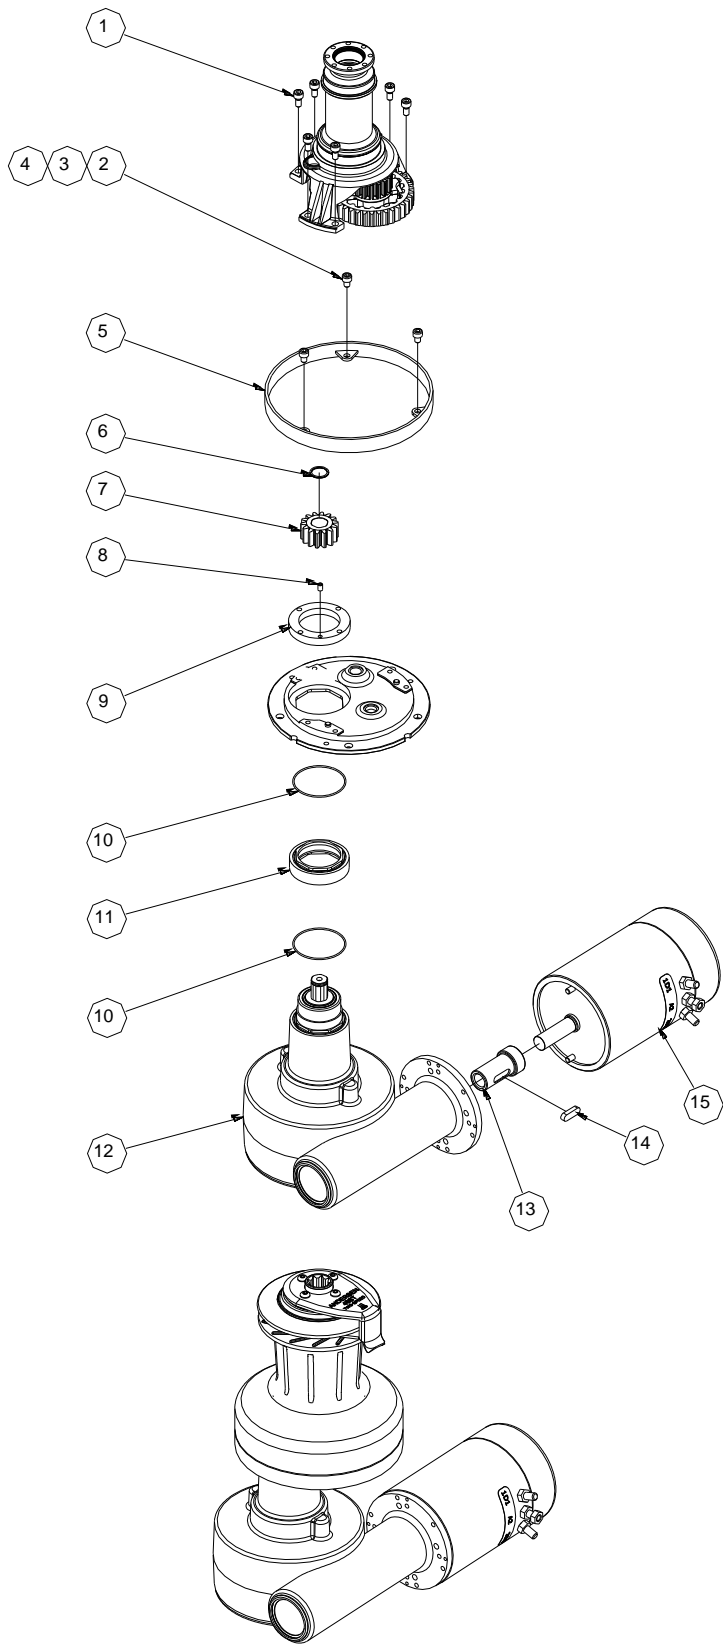

ACCESSORIES

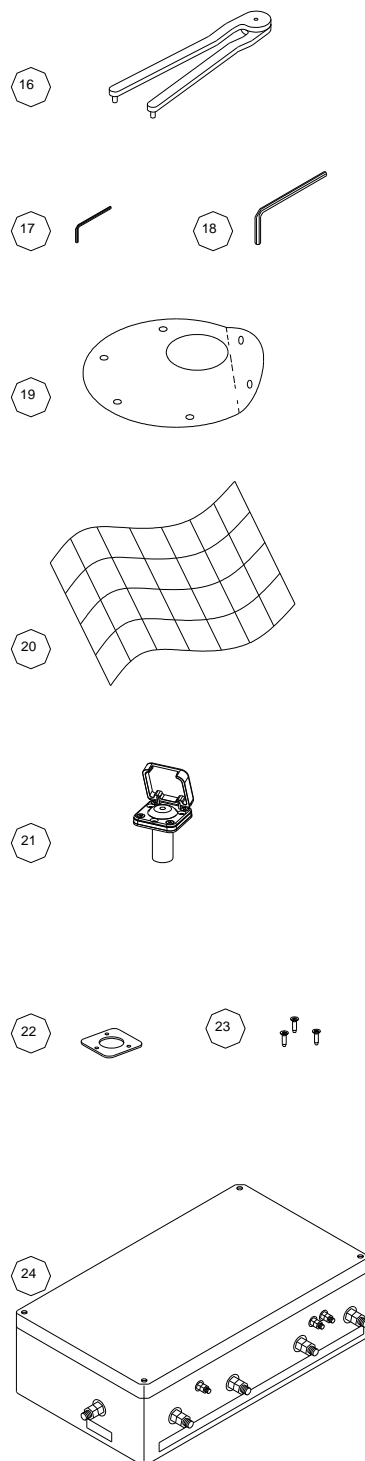

PARTS LIST

46/48 STE/FS 2+2 SPEED (ver.4.0 -)


12V & 24V

POS	QTY	DESCRIPTION	ART. NR.
1	6	SCREW	DIN912-A4-M6X12
2	3	SCREW (FULL STAINLESS)	DIN912-A4-M6X8
3	3	WASHER (STANDARD)	DIN125-A4-M6
4	3	SCREW (STANDARD)	DIN6912-A4-M6X10
5	1	BASE COVER (STANDARD)	735302
5	1	BASE COVER (FULL STAINLESS)	735321
6	1	CIRCLIP	RD829670
7	1	GEAR WHEEL	584601
8	1	LOCKING SCREW	DIN916-A4-M5X8
9	1	NUT FOR GEARBOX	584510
10	2	O-RING	RD100074
11	1	DISTANCE RING FOR GEARBOX	584550
12	1	WORM GEAR UNIT	750803
13	1	MOTOR BUSHING	981400
14	1	KEY	591500
15	1	ELECTRIC MOTOR 12V	RD100334
15	1	ELECTRIC MOTOR 24V	RD100335
16	1	PIN SPANNER	RD738000
17	1	ALLEN KEY 3MM	593000
18	1	ALLEN KEY 5MM	592800
19	1	TEMPLATE	RD100212
20	1	SWITCH LABELS	RD100029
21	2	SWITCH	581900
22	2	SEALING	735050
23	6	SCREW	RD100025
24	1	SWITCH BOX COMPLETE 12V	990112
24	1	SWITCH BOX COMPLETE 24V	990124
	1	BRUSHES FOR ELECTRIC MOTOR 12V	500588
	1	BRUSHES FOR ELECTRIC MOTOR 24V	500589
	1	MANUAL	710446

CONNECTING DIAGRAM

46/48 STE/FS 2+2 SPEED

12V

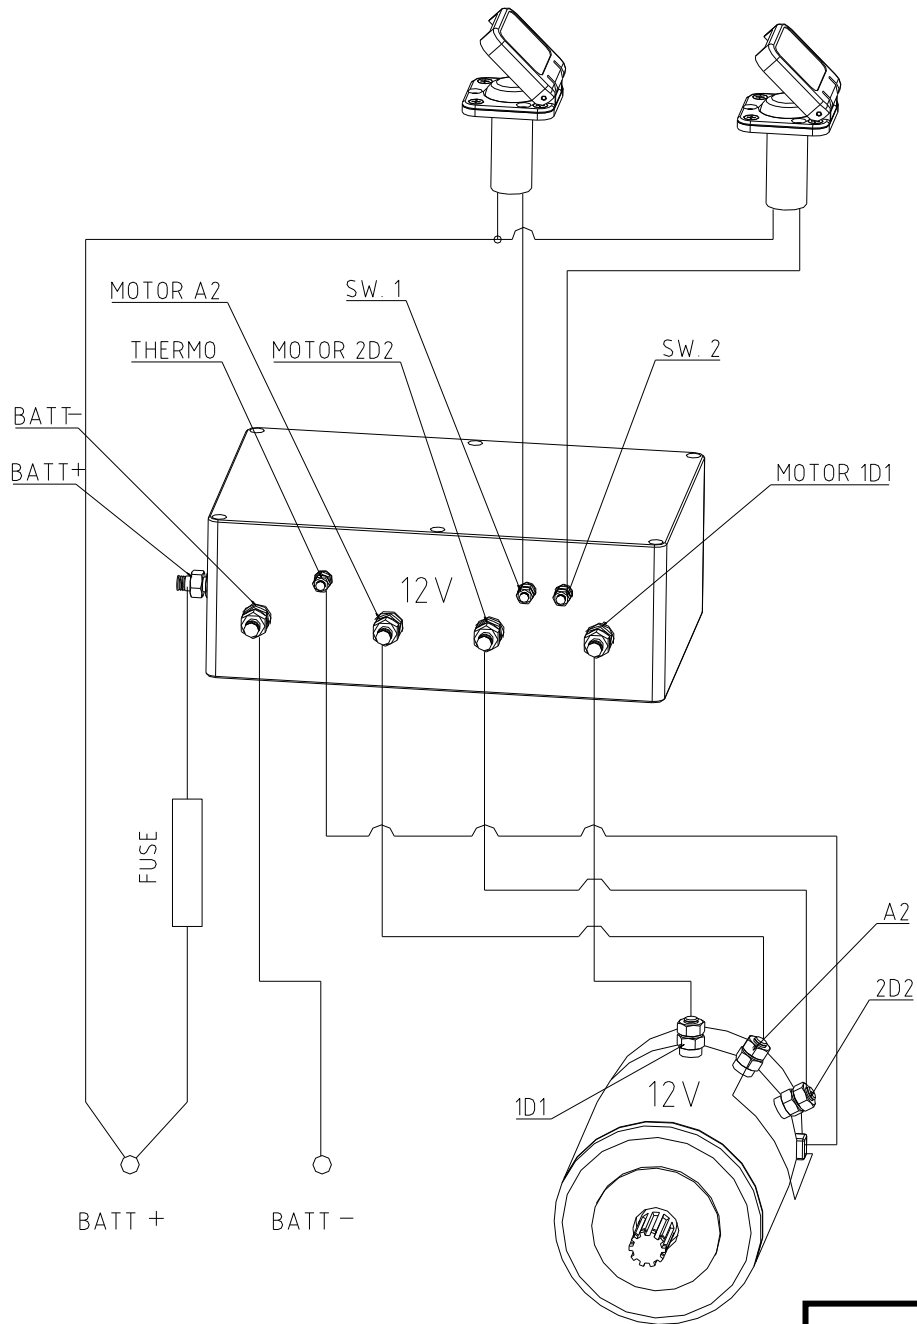

IMPORTANT:


Fuse must be of a slow blow type.



WARNING:
Don't switch cables
(+) with cables (-).
Incorrect polarity will
permanently damage
the control box thus
invalidate warranty

CONNECTING DIAGRAM

46/48 STE/FS 2+2 SPEED
24V

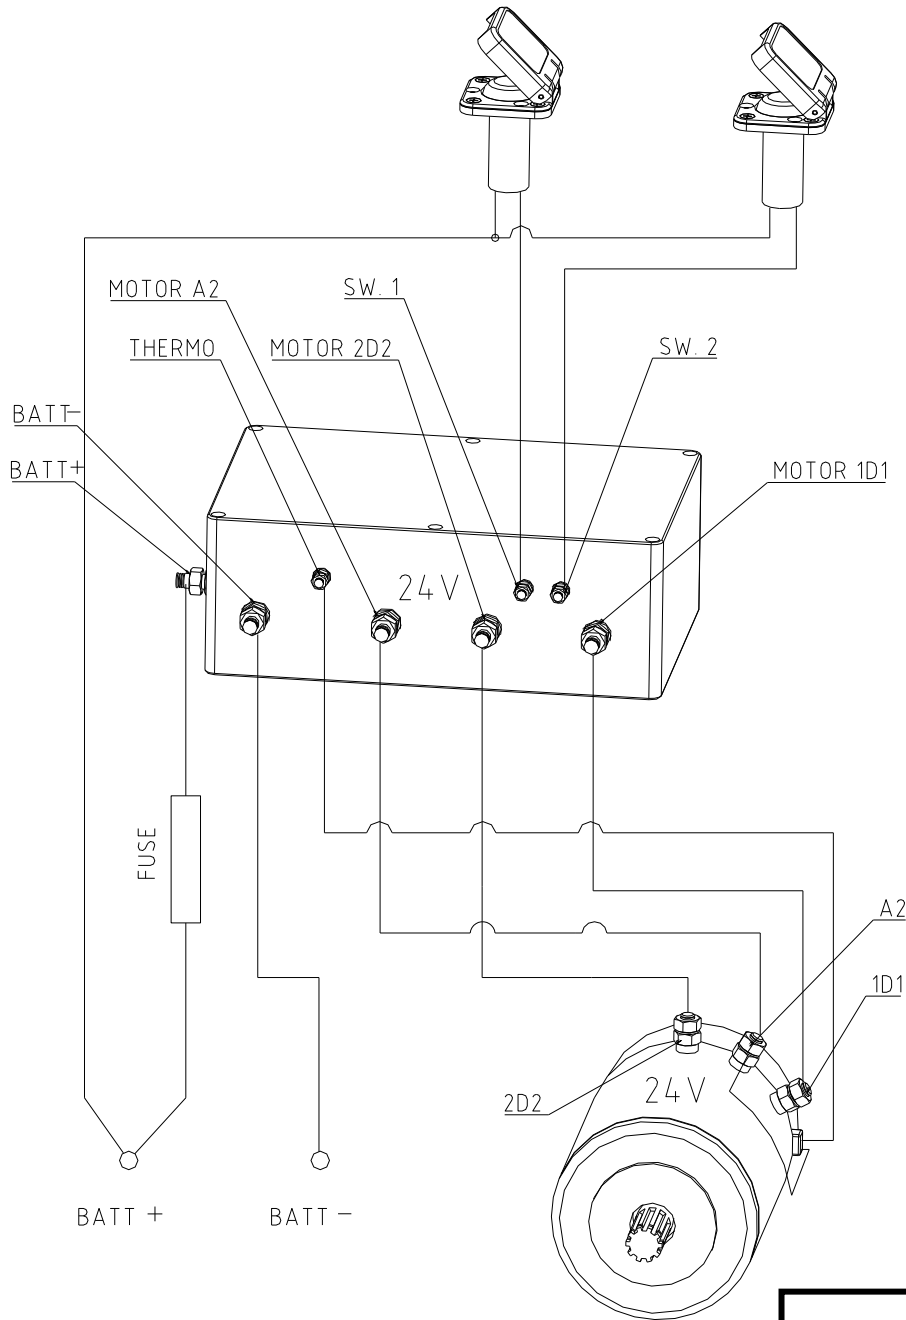

IMPORTANT:

Fuse must be of a slow blow type.



WARNING:
Don't switch cables (+) with cables (-).
Incorrect polarity will permanently damage the control box thus invalidate warranty

WIRE DIMENSIONS & FUSE SIZES

WINCH	WIRE LENGTH*	12V. DC			24V. DC		
		WIRE	FUSE	BAT. CAP.	WIRE	FUSE	BAT. CAP.
46 STE 2+2 SPEED	0-3 m / 0-10 ft	35 mm ²	125 A	240 Ah	25mm ²	76 A	120Ah
	3-8 m / 10-27 ft	50 mm ²	160A	240 Ah	25mm ²	100 A	120Ah
52 STE 2+2 SPEED	0-3 m / 0-10 ft	35 mm ²	125 A	240 Ah	25mm ²	76 A	120Ah
	3-8 m / 10-27 ft	50 mm ²	160A	240 Ah	25mm ²	100 A	120Ah
58/62 STE 2+2 SPEED	0-3 m / 0-10 ft	50 mm ²	160 A	360 Ah	25mm ²	100 A	180Ah
	3-8 m / 10-27 ft	70 mm ²	200 A	360 Ah	35mm ²	125 A	180Ah
68/72 STE 2+2 SPEED	0-3 m / 0-10 ft	70 mm ²	200 A	360 Ah	25mm ²	100 A	180Ah
	3-8 m / 10-27 ft	95 mm ²	224 A	360 Ah	35mm ²	125 A	180Ah
78 STE 2+2 SPEED	0-8 m / 0-27 ft	n/a	n/a	n/a	70mm ²	360 A	480Ah
	8-12 m / 27-54 ft	n/a	n/a	n/a	95mm ²	360 A	480Ah
	12-16 m / 27-54 ft	n/a	n/a	n/a	120mm ²	360 A	480Ah
	16-20 m / 54-81 ft	n/a	n/a	n/a	150mm ²	360 A	480Ah
110 STE 2+2 SPEED	0-8 m / 0-27 ft	n/a	n/a	n/a	70mm ²	360 A	480Ah
	8-12 m / 27-54 ft	n/a	n/a	n/a	95mm ²	360 A	480Ah
	12-16 m / 27-54 ft	n/a	n/a	n/a	120mm ²	360 A	480Ah
	16-20 m / 54-81 ft	n/a	n/a	n/a	150mm ²	360 A	480Ah

*) *WIRE LENGTH* is defined as the distance from battery to switch box + the distance from switch box to motor.

WORLDWIDE DISTRIBUTION

(FOR UPDATED DISTRIBUTOR LIS, PLEASE SEE WWW.ANDERSENWINCHES.COM)

WARRANTY

Refer to our website www.ronstan.com/warranty for our terms and conditions.